



## Connections


### MonTICK – Generator Monitor Type 2



Date: 28 Sept 2015

Contact: [michael@gentick.co.za](mailto:michael@gentick.co.za)

## Connections

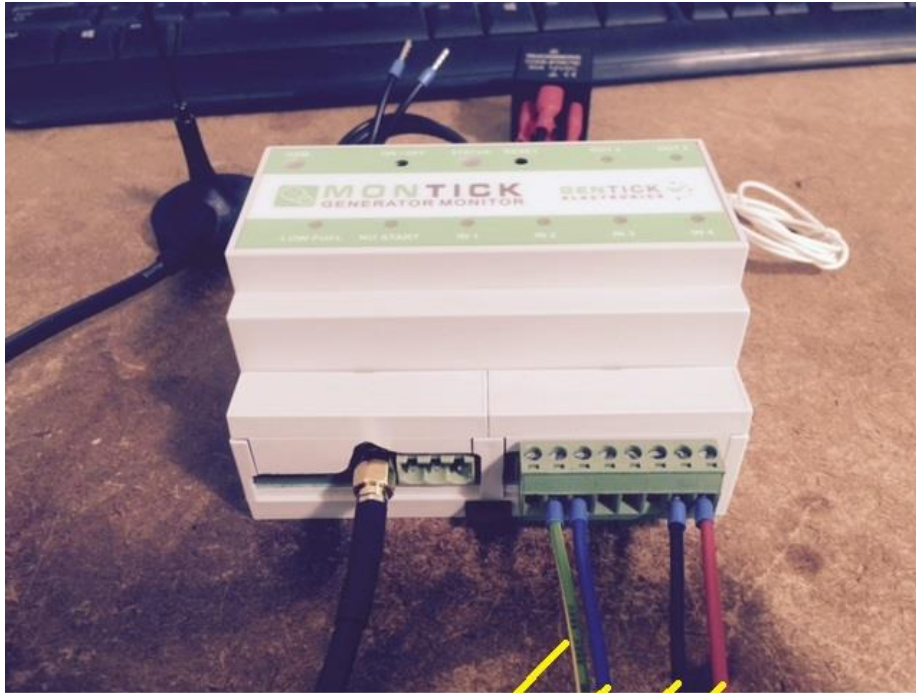


Green/Yellow Connect to Common Alarm Nexys - Wire No 202

Blue Connect to Genset Running Nexys - Wire No 201

Black Connect to Battery Neg Nexys - Wire 31

RED Connect to Battery Pos Nexys - Wire 147

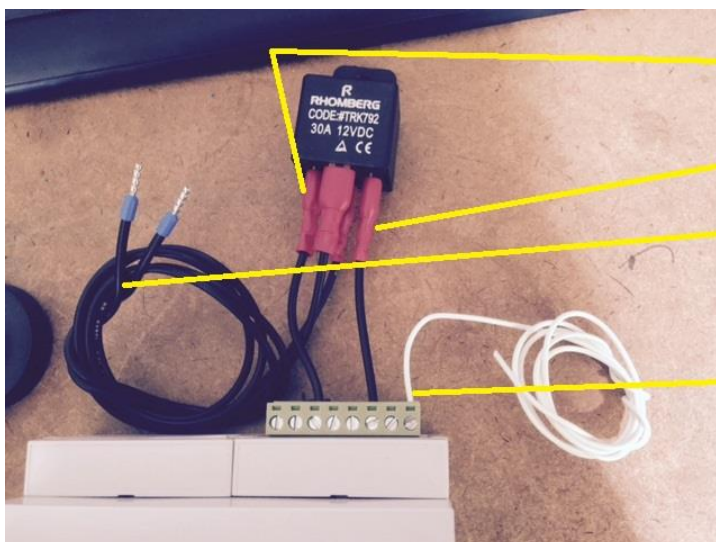

Start Relay Coil Pos

Start Relay Coil Neg

Relay Normally Open Outputs Connect to dry contact between ATS and Gen Controller. BINV

White Wire is fuel level Connect to Nexys - Wire 178

# **MONTICK** GENERATOR MONITOR

